

SIEMENS

RL-DIN rail housing

RL-Hutschienengehäuse

Boîtier à profilé chapeau RL

Carcasa del raíl DIN RL

Invólucro da calha RL-DIN


Scatola di distribuzione RL

RL-DIN rayı gövdesi

Корпус на DIN-рейку версии RL

Obudowa na szynę DIN dla RL

RL- 顶帽式导轨外壳

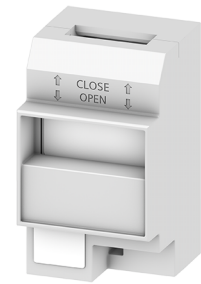

5WG1590-8AB01



Operating Instructions Betriebsanleitung
Instruções de Serviço İşletme kılavuzu

Notice d'utilisation
Руководство по эксплуатации



Instructivo
Instrukcja obsługi

Istruzioni operative
使用说明



Contents / Lieferumfang / Etendue de la livraison /
Contenido / 供货范围

Required tools / Notwendige Werkzeuge /
Outils nécessaires / Herramientas requeridas / 必要工具

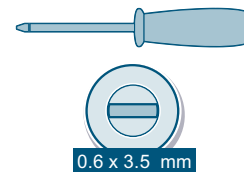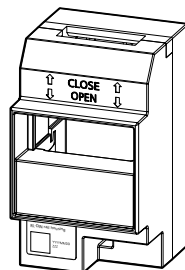


0.6 x 3.5 mm



Assembly / Montage / Montage / Montaje / 安装



5WG1125-4AB23, 5WG1260-4AB23, 5WG1512-4AB23, 5WG1513-4DB23
5WG1521-4AB23, 5WG1526-4DB23, 5WG1605-4DB23

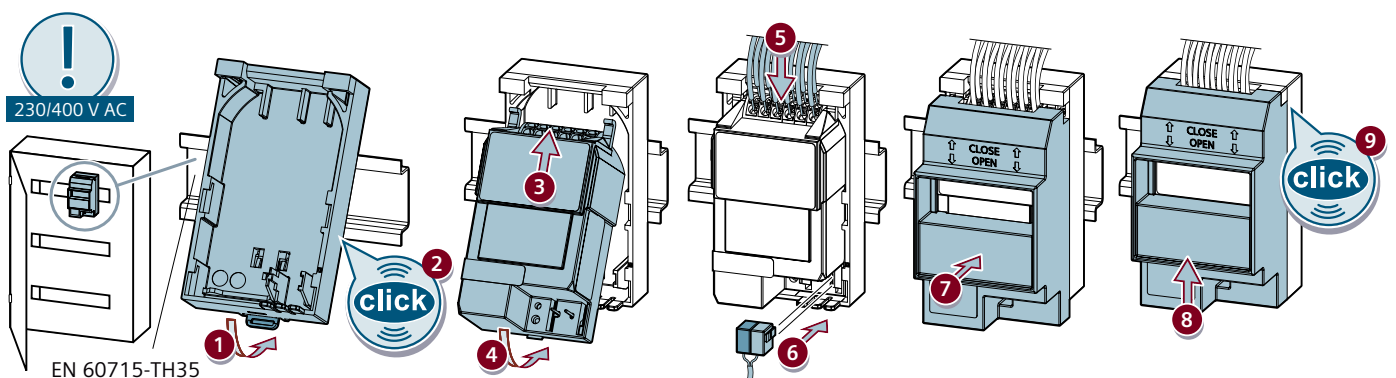





Removal / Demontage / Démontage / Desmontaje / 拆卸



5WG1125-4AB23, 5WG1260-4AB23, 5WG1512-4AB23, 5WG1513-4DB23
5WG1521-4AB23, 5WG1526-4DB23, 5WG1605-4DB23

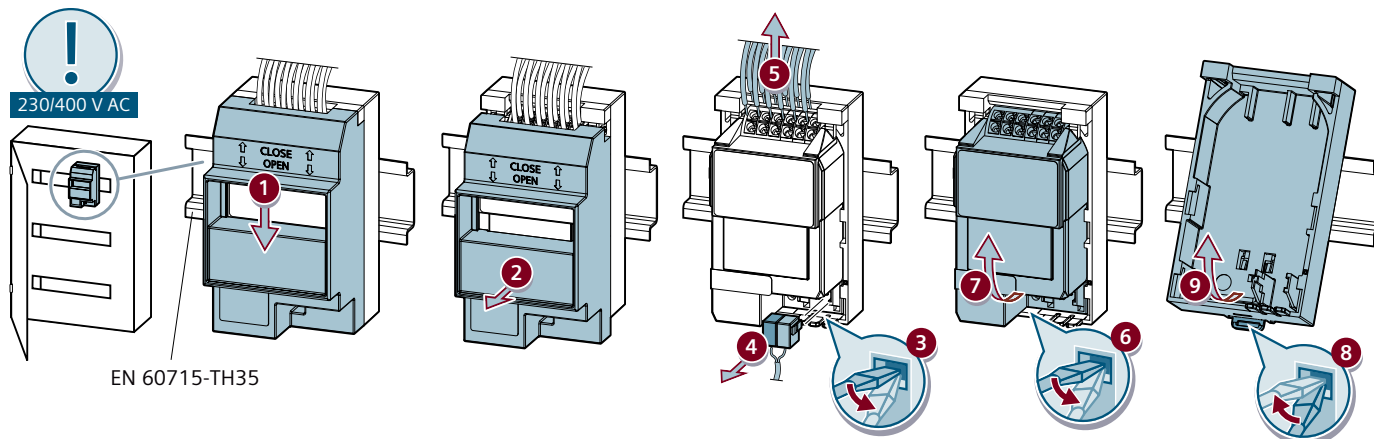

Information / Information / Informations / Información / 信息

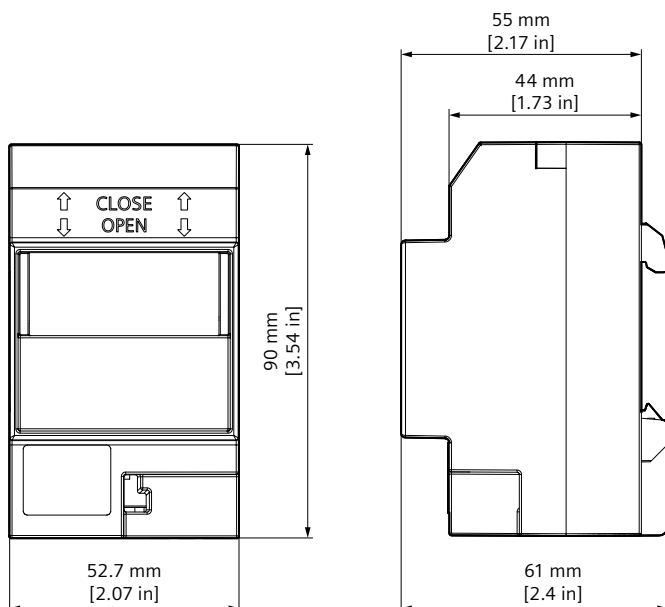

Technical Documentation:
<https://www.siemens.com/gamma-td>



Technical Support
<https://www.siemens.com/supportrequest>



FAQ:
<https://support.industry.siemens.com/cs/ww/en/ps/faq>

